



 
 **BREED[®]**

**USER
GUIDE**

**Y SERIES[™]
FIRE PIT**

SMOKELESS FIRE ON THE GO

From tailgating to camping trips, the Y Series Smokeless Fire Pit features a lightweight portable design with a built-in handle to accompany you on any adventure. Enjoy the warmth and ambiance of a smokeless fire wherever you go.

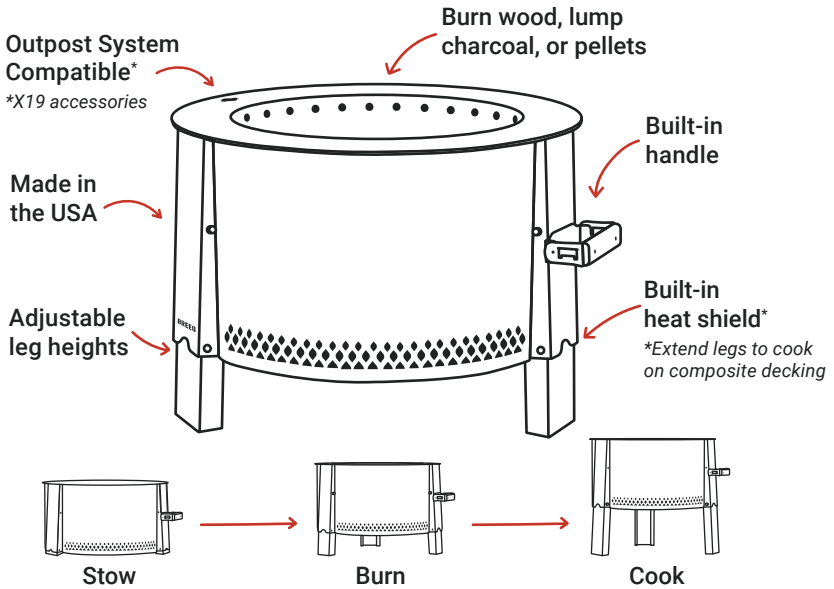

FEATURES

LIVE-FIRE COOKING: Become the ultimate live-fire chef when you accessorize your Y Series with our premium attachments and tools. Compatible with all our X Series 19 tools, from Breed's Outpost Grilling system to Skillet Rest and Flat Top.

SMOKELESS TECHNOLOGY: The Y Airflow is designed to give the optimal amount of air to your fire. This, along with our enhanced secondary burn technology, produces the optimal smokeless fire experience.

ADJUSTABLE LEGS: With three different adjustment settings, stow for easy carry, transport, or storage, burn for time around a smokeless fire, and cook for optimal grilling height. *Do not adjust while hot.*

MULTI-SURFACE SAFE*: Safe to use on a variety of surfaces including stone, pavement, wood chips, and decking*. When used on or near any combustible surface, we recommend a spark screen, compatible with the X19 Spark Screen.

**Always extend legs to cook/highest setting when used on composite decking.*

HANDLE: Allows for easy carry and transport to your destination with included bottle openers on the sides.

SETTING UP

Remove your fire pit from the box and place on a level surface. The area should be well ventilated with ample room around the fire pit and void of any flammable objects.

Your Y Series Fire Pit is shipped with the legs in full stow position. You **MUST extend and lock the legs** into the burn/middle or cook/high position before starting a fire. **Do not burn with legs in the stow/lowest position.**

Always have something to put out the fire in case of emergency. Do not burn fires in illegal areas such as above tree lines or sensitive areas with fire bans or high potential for forest fires.



TENDING

CLEANING

We use grade 304 stainless steel for rugged good looks and ultra-low maintenance. But occasionally, you might want to clean the stainless steel components of your Y Series. We recommend your favorite stainless steel cleaner and a soft cloth. If spraying down with water, allow the fire pit to dry completely, do not store it wet. If the legs are difficult to adjust, remove them from the fire pit and clean out any debris or ash that may have gotten inside the housing.



ASH MAINTENANCE

Dump ash out regularly in a safe area. Do not allow built-up ash to get wet, this can cause the metal to degrade or rust. Wait for the fire pit to cool down and for the fire/coins to completely extinguish before touching or dumping out ashes.

And remember: always remove the ashes from your Y Series Fire Pit before long-term storage.



WARNING

The Breco Y Series Smokeless Fire Pit is designed for outdoor use. **Never use your Y Series Fire Pit in a building, garage, or any enclosed area.** Do not use your Y Series Fire Pit in illegal areas or when fire bans or the potential for forest fires exist. Keep at least 10 feet of clearance above the pit from branches or overhangs.

Always place your Y Series Fire Pit on a level, stable surface. **The legs of your Y Series Fire Pit must be extended and locked into the burn/middle or cook/high setting before lighting.** When using your Y Series Fire Pit on a combustible surface, we recommend using a spark screen and keeping the wood below the rim to ensure proper fire safety. **Always extend legs to cook/highest setting if being used on composite decking.**

Do not move or adjust the settings of your Y Series Fire Pit when burning. **Do not move or store your Y Series Fire Pit until all ashes and coals are extinguished and all surfaces have cooled completely.** Never touch ashes or coals to see if they are hot. Do not pour water into your Y Series to extinguish flames, rather allow all your fires to die down naturally.

 
All surfaces of the Y Series will become extremely hot when in use. To avoid burns, don't touch any part of the fire pit until it's completely cool (unless you're using protective gear like heat-resistant gloves, hot pads, potholders, etc.).

Exercise the same caution you would with any open fire. When using your Y Series Fire Pit, **never leave it unattended, especially around children and pets.**

⚠ WARNING: This product can expose you to nickel, which is known to the State of California to cause cancer and birth defects or reproductive harm. For more information go to www.p65warnings.ca.gov




When cooking on your Y Series with the Outpost Grill, do not swing the Outpost Grill system 180° away from the fire pit, this can cause potential tipping.

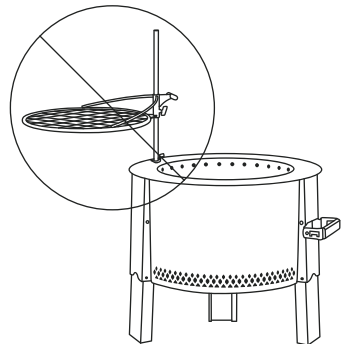


COMPLETE YOUR Y SERIES SETUP



 
Y SERIES LID

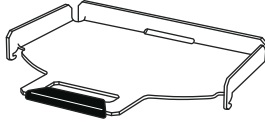


FLAT TOP
X19

 

**OUTPOST
KETTLE HOOK**

 

SKILLET REST

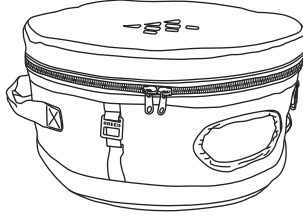 


TRANSIT CASE




**OUTPOST
SEAR DISC**



 **OUTPOST™ HEAT
DEFLECTOR**
X19

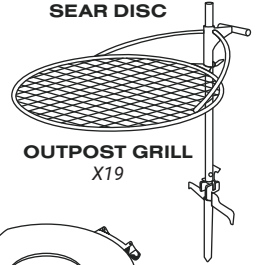


OUTPOST GRILL
X19

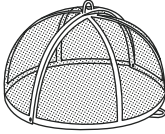 

SPARK SCREEN
X19



 **CAST IRON
KETTLE**

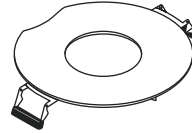

**SEARPLATE™
GRIDDLE**
X19



 
BUILDING A FIRE

1 CHOOSE YOUR FUEL

Select a firestarter material, like shredded newspaper or cardboard, a dry, thinly split softwood for kindling, and a dry, split hardwood for your main fuel. Make sure your fuel is less than 4" in diameter. *Focus on creating as much airflow as possible throughout the whole fire building process.*

Newspaper

Cardboard




Thinly split softwood



Dry split hardwood

2 BUILD A LOG CABIN

 
Start with 2 full-size pieces of cordwood and lay them caddy-corner on the Y Airflow system across from each other. Then, lay two pieces of kindling perpendicular across those. Fill the inside square with your firestarter. Continue with the pattern in kindling until it approaches the top of your fire pit, filling the center with firestarter as you go, if you're using newspaper or cardboard. If you're using another type of firestarter, you can place it in the middle when you start building, but there's no need to fill the whole structure with it. Taper the "cabin" inward as you get close to the top.

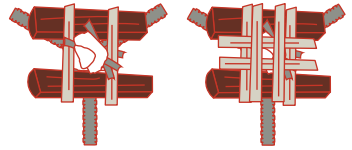

Build a log cabin from the center

3 LIGHT IT UP

 Using a grill lighter or a long match, light the firestarter at the bottom of the log cabin. *We do NOT recommend using regular matches, as they can be harder to use when you're reaching into the fire pit.*

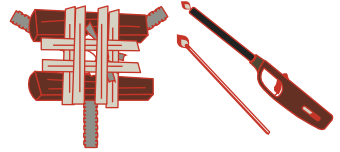

Start the fire with a grill lighter or long match

4 FEED THE FLAMES

 
Once you've got a tiny blaze going, start adding cordwood without disrupting or knocking over the kindling cabin. Starting with smaller cordwood pieces and gradually using larger ones as the fire grows, lay the pieces toward the perimeter of the bottom of the fire pit. This will help your fire spread evenly around your fire pit.



Add firewood to keep the fire smokeless

5 LET IT BURN OUT

When you're done with your fire, patiently wait for the fire to burn out on its own. *Don't pour water on it, and never leave your fire unattended.* If you do need to walk away, always cover with a spark screen and make sure there's nothing near the fire pit that could catch on fire or be damaged. Clean out the ashes every 4-5 burns once the fire pit cools to maintain airflow and always have a smokeless fire.

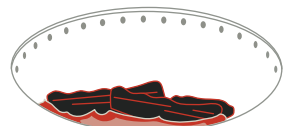


Let the fire naturally burn out

LUMP CHARCOAL

1 USE A CHARCOAL CHIMNEY

 The best way to get the right amount of coals burning in your Y Series Fire Pit is by using a standard-size charcoal chimney. Place firestarter, tinder, and/or paper in the bottom of the charcoal chimney. Then, stack lump charcoal inside the chimney until full.

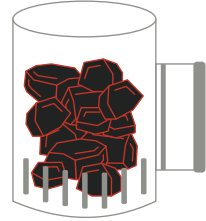

Add charcoal and a firestarter to the charcoal chimney

2 LIGHT IT UP

Light at the bottom and wait until coals are burning and hot. Once the coals are hot you can then dump them into the bottom of the fire pit. This should be the perfect amount of lump charcoal to use in your Y Series Fire Pit. Do not add any more charcoal.

WOOD PELLETS

 
1 BUILD A BASE LAYER

Start by pouring 3-4 inches worth of high-quality pellets into the bottom of your Y Series Fire Pit. It helps to push some of the unlit pellets into a mound in the center of the Y Airflow inside the fire pit.

Place 2 firestarters close to the Y Airflow in each quadrant. Firestarters should be nestled into the pellets with the tops exposed for lighting.

2 LIGHT IT UP

Using a grill lighter or long match, light each firestarter. We suggest lighting the firestarters the furthest away from you first, then working your way back towards where you are standing, this way you do not have to reach over any flames.

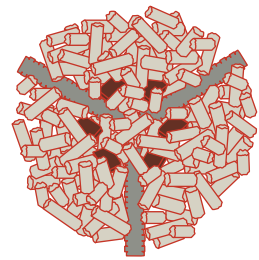

Wood pellets and firestarters mounded around the Y Airflow

3 FEED THE FLAMES

Pellets burn hot and fast, add 1-2 cups at a time to refuel. If you add too much at once, the airflow can slow down, and the pellets may smoke at first until they ignite. Having a small scoop on hand to add pellets is very helpful. You can also add split wood on top of the pellets to keep the fire burning.

WARRANTY

Breco, LLC warrants to the original purchaser that the Breco Fire Pits and Accessories are free from workmanship and material defects during the lifetime of the original purchaser. In addition Breco, LLC warrants no rust through or burn through for a period of five (5) years from purchase. If a product is covered by this limited warranty, Breco, LLC, at its option, will repair or replace with a new product free of charge, excluding any applicable shipping and handling charges. If the product being warranted has been discontinued, the replacement product will be of equal or similar value. Altering any Breco product, or using the product in any way other than the intended use, will void this Lifetime Warranty. Except as provided above, no warranty is offered on rust, paint or finishes due to being made with material with potential for corrosion. Steel products will develop a natural iron oxide patina over time.

Breco, LLC's liability and obligation is limited to repair or replacement of the product, at their option. The purchaser must provide Breco, LLC with photos of the product's defects for evaluation. Upon approval of warranty, Breco, LLC will issue a return for repair, or return for exchange of the defective product.

This warranty does not cover damage or product failure caused by normal wear and tear, accident, misuse, negligence, tampering, modifications, act of war, overloading, improper attachment, improper maintenance, or failure to maintain. Breco, LLC is held harmless for any injury or death caused by the misuse of this product. This warranty does not cover damage caused by proper or improper use of our products to any surrounding surfaces, structures, or furnishings. This includes, but is not limited to, discoloration or damage to a patio or deck surface, furniture, house, or any other structure.

This warranty gives you specific legal rights providing said product is put to its proper designated use. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. NO ORAL AGREEMENT, GUARANTEE, PROMISE, REPRESENTATION OR WARRANTY SHALL BE BINDING. IN NO EVENT WILL BRECO, LLC BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES EVEN IF BRECO, LLC HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES AND EVEN IF BRECO, LLC HAS KNOWLEDGE THAT FAILURE TO PERFORM COULD CAUSE CONSEQUENTIAL ECONOMIC LOSSES. IN ANY EVENT, CUMULATIVE DAMAGES FOR BREACH OF THIS WARRANTY WILL BE LIMITED TO THE AMOUNT ACTUALLY PAID TO BRECO, LLC FOR THE PRODUCT. THIS PARAGRAPH SHALL APPLY TO ALL ACTIONS RELATED TO THE PRODUCT, WHETHER BASED ON TORT, CONTRACT OR OTHER THEORIES. THE PURCHASER ACKNOWLEDGES THAT THIS PARAGRAPH ALLOCATES THE RISK OF PRODUCT FAILURE BETWEEN BRECO, LLC AND THE PURCHASER, AND THAT THIS ALLOCATION IS REFLECTED IN THE PRICE PAID.

EARN POINTS & ENJOY MEMBERSHIP BENEFITS

BECOME A FIREMASTER

- 1 SIGN UP**
Create an account and earn points.
breco.com/pages/rewards
- 2 EARN POINTS**
Every time you shop.
- 3 REDEEM POINTS**
For exclusive discounts and products.



BRECO.COM

(800) 413-9848

CONTACT@BRECO.COM

©2024 Breco LLC. All rights reserved. 06/24

**SHARE & TAG
US ON SOCIAL**



@BRECO